Get More from Cel-Fi WAVE

Cel-Fi WAVE is an application available on both smartphones and desktop computers that allows users to interact with Cel-Fi, to access advanced and supplementary features.

😵 Bluetooth°



Dashboard:

Glance-able view to the state of your Cel-Fi environment.

Settings:

Change the default Operator, setup an external antenna, name your booster, and more.

Advanced Mode:

Get a real-time technical overview of the installation of your Cel-Fi Booster.

Booster Updates:

Keep your Cel-Fi Booster up-to-date as new software versions become available.

Register: (When Required) Easily register your Cel-Fi Booster.



Google play

For more information, and software, go to: www.Cel-Fi.com/wave



Copyright © 2016 by Nextivity, Inc, U.S. Patents pending. All rights reserved. The Nextivity and Cel-Fi logos are registered trademarks of Nextivity Inc. All other trademarks or registered trademarks listed belong to their respective owners. Designed by Nextivity Inc in California. qsg_DU0-16-0211



Cel-Fi[™] DUO EL-FI **Quick Start Guide**



NETWORK UNIT

COVERAGE UNIT

Cel-Fi DUO Smart Signal Booster™

A true plug-and-play system that doesn't require the installation of antennas or cables.

To use this product you need:

- A 3G, 4G, or LTE compatible mobile phone with qualifying service
- An area inside your home that receives at least one bar of 3G, 4G, or LTE coverage
- Power outlets

In this package you will find:

- Network Unit
- Coverage Unit
- Two Power Adapters
- Two Brackets with hardware

BEFORE You Begin

If you can find a place in your home that gets at least one bar of 3G, 4G, or LTE signal, the revolutionary **Cel-Fi DUO** Signal Booster system may bring you smoother video and surfing, and improved voice coverage throughout your home. **Cel-Fi DUO** Signal Booster is a true plug-and-play system that doesn't require the installation of antennas or cables.

Step 1

Find the location with the best coverage:

The first step in setting up your **Cel-Fi DUO** Signal Booster is to find the location in your home or office with the best mobile network signal. Use your phone to identify the area with the most bars of signal. Typically, the best service will be near a window in the highest floor of your home or office. Make sure a 3G, 4G, or LTE icon is displayed on your handset.

Step 2

Plug in the Network Unit:

Plug the **Network Unit** into an easily accessible outlet near the area with the strongest 3G, 4G, or LTE signal. (Note: the power supplies in your kit are identical.) Make sure that at least one bar is displayed on the signal strength indicator on the front of the **Network Unit**. If you do not see at least one bar, try a different location.



Step 3

Optimize the Network Unit Placement:

The bars on the front of the device indicate the strength of the mobile network signal in the area. Moving the **Network Unit** to a different location in your home may increase the signal, and can improve the quality of your service.



Step 4

Place the Coverage Unit:

Place the **Coverage Unit** as far away as possible from the **Network Unit** or where you need coverage the most, making sure that you have enough distance between the two units. After several minutes, the numeric display will stop cycling.



If your device is set up properly, the green icons will appear on the display as seen above. It is possible to place the **Coverage Unit** too close or too far from the **Network Unit**. If this happens, a red icon will illuminate indicating that you need to move the **Coverage Unit** either closer to, or further away from the **Network Unit** (see below).



Two green icons indicate that the

Coverage Unit is

functioning normally.

OK



Network Unit.

Four red icons & a scrolling display

indicate that the Coverage Unit

needs to be moved closer to the






TOO CLOSE

A zero on the numeric display indicates that the **Coverage Unit** needs to be moved farther away from the **Network Unit**.

Step 5


Optimize The Coverage Unit Placement:

The number on the front of the **Coverage Unit** display indicates the quality of the placement. For the best service experience, move the **Coverage Unit** around your home until an 8 or 9 displays. Based on the **Coverage Unit** number, you may need to move farther/closer to the **Network Unit**.

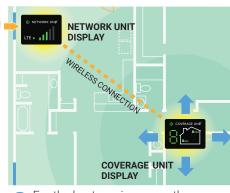


For the best service, move the Coverage Unit until an 8 or 9 displays.

Mounting Instructions

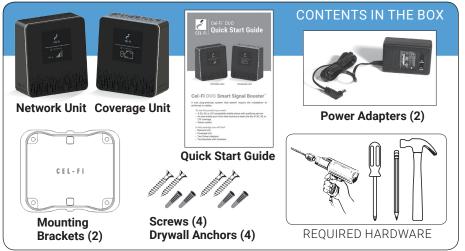

Each Cel-Fi device may be supplied with mounting brackets and hardware to mount both (or either) the **Coverage Unit** and the **Network Unit**.

NOTE: The brackets come equipped with screws and inserts for mounting in standard drywall. Before you install the mounts, make sure there are no wires or other objects, or metal plates, behind the drywall layer that will interfere with the inserts, screws, mount, or mounted units.

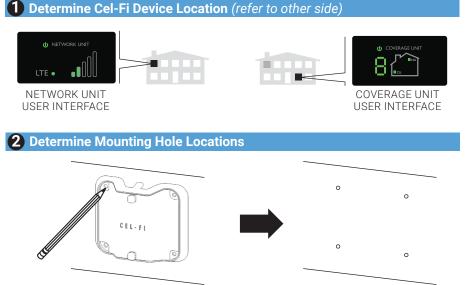

4 Install Anchors (Drywall) **3** Drill Anchor Holes (Drywall) In each marked spot, use a 3/16" drill bit to drill guide holes for the anchors. 5 Install Mounting Bracket CEL-FI 6 Attach the Cel-Fi Unit to the wall mounted bracket MOUNTING HOLES CEL-FI Figure 1 Figure 2 Back view with mounting holes. Backside of unit fits onto bracket hooks. IMPORTANT: Your Cel-Fi DUO Signal Booster is electronic equipment. Both units must be kept indoors and in a dry, cool, well ventilated area.

Troubleshooting

NETWORK UNIT	Indicator	Issue	Try This
Power & Status Indicator	No lights on the Network Unit	The device is not receiving power.	1. Is the unit plugged in?
U NETWORK UNIT	O display.		2. Is there power at the outlet?
			Try exchanging the power supplies with the Coverage Unit to determine if the power supply is defective.
	Power indicator is red.	Network Unit hardware issue.	Please check the Coverage Unit for an alternating error number to determine the proper solution from the list of Error Messages below.
LTE Signal Indicator Indicator	O Power indicator is green but no bars on the Network Unit display.	Network Unit does not have a 3G or 4G LTE signal.	Try moving the Network Unit to another room or area where you have more coverage. (Use your mobile phone to find the best 3G or 4G LTE coverage).
	(((U)))) Power indicator is Flashing (((U)))) Green.	Network Unit Is setting up communications with Coverage Unit.	Wait a few moments, once a path has been set up, the light will stop flashing.
	LTE indicator is lit or not lit (what does this mean?)	The LTE indicator just means that 4G LTE is available and is also being boosted.	If you have bars of signal on your Network Unit but the LTE indicator is not lit, you still have boosted high speed 3G service.
COVERAGE UNIT	Indicator	Issue	Try This
Power & Status Indicator Network Unit Indicator	No lights on the Coverage Unit display.	The device is not powered.	 Is the unit plugged in? Is there power at the outlet? Try exchanging the power supplies with the Network Unit to determine if the power supply is defective.
	Coverage Unit Power Indicator is red	System Error.	Please check the seven segment display for an alternating Error Messages to determine the proper solution from the list of Error Messages below.
	Seven segment display cycling for more than a minute.	The Coverage Unit still trying to wirelessly connect to the Network Unit .	 Wait for the display to stop cycling. This could take several minutes. Make sure that all other electronic devices (Wi-Fi routers, home phones, computers, etc.) <i>are</i> at least 1 meter from the Coverage & Network Units.
Coverage Unit Indicator Seven Segment Display	() COVERACE UNIT Coverage of the second sec	The Coverage Unit is "Too Close" to the Network Unit .	Move the Coverage Unit further away from the Network Unit . The separation distance may be over 20 meter for a residence, and much further for open commercial spaces. Try and get an 8 or 9 on the display.
	• COVERAGE UNIT • Coverage Unit and • Network Unit icons are red with two arrows.	The Coverage Unit is "Too Far Away" from the Network Unit .	Move the Coverage Unit closer to the Network Unit .
PERFORMANCE	Indicator	Issue	Try This
The Coverage Unit has a boosted signal but only in a small area.	Low Coverage Unit number or Network Unit input signal.	Network Unit and Coverage Unit are too close together or Network Unit signal level is low.	Move the Coverage Unit away from the Network Unit to get a higher coverage number. This can mean putting the Coverage Unit on the opposite end of your home. Higher numbers indicate better coverage. You can also move the Network Unit to an area with a stronger signal. More bars is always better.
ERROR MESSAGES	Indicator	Issue	Try This
	E1	No 3G or 4G LTE signal at the Network Unit .	Try moving the Network Unit to another room or area where you have coverage. (Use your cell phone to find the best 3G or 4G LTE coverage).
	E3 E4	Coverage Unit is overheating. Network Unit is overheating.	Make sure that the vents on the unit are not blocked. Move the unit to a cooler area. The system will start working normally when it cools down.
	E5	Registration Required.	Register your address with your mobile network provider, using the Cel-Fi Wave app.
Alternating E and	E8	Input signal at Network Unit too strong.	Network Unit is too close to a cellular tower. Move your Network Unit to another location. You might need to move your system to the other side of your home/office.
Numeric Error Code	E9	Your system has been moved from its original address. Registration required due to location lock	Either move the system back to its original location or register your new address with your mobile network provider, using the Cel-Fi Wave app .

If you see any other error messages or for additional information about Cel-Fi DUO Signal Booster Installation go to: www.Cel-Fi.com/support